

Water-Box Install Tips

The Rainmaker Water Box is a durable, easy way to provide water for deer, birds, bees and critters. Made of food-grade polyethylene.



Filling

The Water-box can be filled in multiple ways. You can place the hose directly in the drinking area, put a hose into the hatch or simply connect a hose to the included 3/4" brass hose fitting.

Cleaning

During the hot summer months you may experience some algae growth. Generally this algae is not harmful to animals and they will continue to drink. However, it is suggested that you periodically clean the water-box with plain soapy water and hose it down. Drain the water through the drain plug, open the hatch and wash out the inside and outside of the tank. Note that using bleach in the water to prevent algae growth is not recommended.

Winterizing

While the Water-box is durable and will resist some light freezes, it is best to drain the tank for the winter if prolonged hard freezes are expected.

To drain the tank, simply unscrew the bottom drain plug.

Using the Optional Float-Valve

If you purchased the optional float-valve, it should arrive installed inside the tank and properly adjusted. Just attach the hose to the standard 3/4" brass garden hose fitting and turn on the water. Once the water level rises, the float-valve will automatically shut the water on and off as needed.

Note: the float-valve may be purchased and added at any time.

